 


If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia
The Leader in Custom Fit

FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM

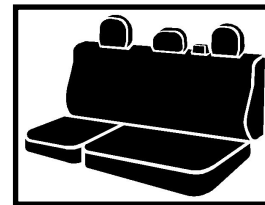

INSTALLATION INSTRUCTIONS
FOR
NP92-33/ Oe32-33/ SL62-33/ SP82-33/ TR42-33/ TRS42-33

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVERS:


1. Remove seat belt buckles from elastic holder on cushion
2. Center cover on seat
3. Lift cushion halfway to up position
4. Insert strap through crevice and buckle
5. Attach velcro to carpet on underside of cushion
6. Slip seat belt buckles through elastics on seat cover
7. Adjust all straps, buckles and velcro to equalize tension

B) BACKREST COVER:

1. Remove headrests. (see notes below).
2. Side headrests are NOT removable and there are allowances in the seat cover.
3. Slip cover over backrest. Ensure cover is installed under seat belt strap
4. Snug cover and tuck in bottom of seat cover between seat backrest and metal car seat hook up.
5. Place both top corner straps with velcro on side of the backrest
6. With seat cushion in up position, locate and pull strap/velcro forward through crevice and secure velcro on bottom of cover
7. Pass center straps behind the seat so they go to floor (see notes below) and secure to velcro on bottom of cover
8. Adjust all velcro for a uniform fit
9. Replace headrest (see notes below)

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE

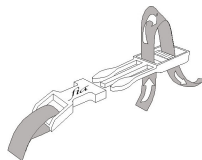

2) HEADREST REMOVAL


- Insert paper clip into holes at base to release
- Lift off

OR




- Push in side release buttons
- Lift off

(If unable to remove consult dealership)

- Only the center headrest is removable. There are openings in the seat cover to allow for the side headrests

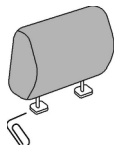

- 3) Due to restricted space, a 2" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. If desired, the strip can be cut from the seat cover box.

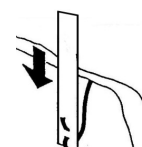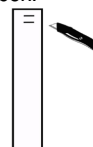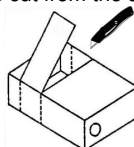

4) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in headrest base.
- Replace headrests

5) HEADREST COVERS

Some models may contain more than one set of headrest covers. Select the ones that fit your headrests best.

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com