

 
If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

*fia*  
The Leader in Custom Fit

FEATURING  
**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

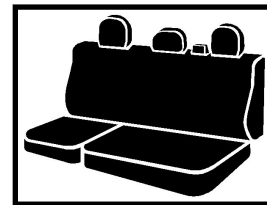

INSTALLATION INSTRUCTIONS  
FOR  
NP92-36/ Oe32-36/ SL62-36/ SP82-36/ TR42-36/ TRS42-36

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) CUSHION COVERS:**

 
1. Remove seat belt buckles from elastic holder on cushion
2. Center cover on seat
3. Lift cushion halfway to up position
4. Insert strap through crevice and buckle
5. Attach velcro to carpet on underside of cushion
6. Slip seat belt buckles through elastics on seat cover
7. Adjust all straps, buckles and velcro to equalize tension

**B) BACKREST COVER:**

1. Remove headrests. (see notes below).
2. Slip cover over backrest. Ensure cover is installed under seat belt strap
3. Snug cover and tuck in bottom of seat cover between seat backrest and metal car seat hook up.
4. Place both top corner straps with velcro on side of the backrest
5. With seat cushion in up position, locate and pull strap/velcro forward through crevice and secure velcro on bottom of cover
6. Pass center straps behind the seat so they go to floor (see notes below) and secure to velcro on bottom of cover
7. Adjust all velcro for a uniform fit
8. Replace headrest (see notes below)

**NOTES:**


**1) SELF-LOCKING SUPER-GRIP® BUCKLE**

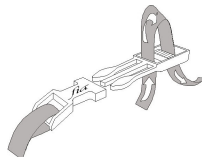

**2) HEADREST REMOVAL**

**CENTER HEADREST:**

 - Push in side release buttons
- Lift off



**SIDE HEADRESTS:**

- Fold forward by pressing side button on headrest
- Lift headrest to most up position
- Push in side release button on base of headrest and lift off

**3)** Due to restricted space, a 2" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. If desired, the strip can be cut from the seat cover box.



**4) RE-INSTALLATION OF HEADRESTS**

- Ensure pre-cut holes in seat cover align with holes in headrest base.
- Replace headrests

**5) HEADREST COVERS**

Some models may contain more than one set of headrest covers. Select the ones that fit your headrests best.

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

*fia*

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

4-17-14