

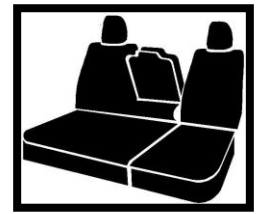 
If you have any comments or concerns,  
 please feel free to contact our  
 customer service department at:  
 Toll-free: 1-800-835-0438  
 OR  
 Email: info@gofia.com

SEAT COVERS  
 BY



**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**



**INSTALLATION INSTRUCTIONS  
 FOR**

**NP92-52/ Oe32-52/ SL62-52/ SP82-52/ TR42-52/ TRS42-52**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A. CUSHION COVERS – 40 & 60 PORTION:**

- |   |  |
|---|--|
| 1) Center cover on cushion.   | 4) Attach side velcro to the underside of cushion                                  |
| 2) Release latch and lift seat ¾ up position  | 5) Adjust all velcro, straps and buckles to equalize tension and ensure a snug fit |
| 3) Tuck back flap through crevice, locate straps under seat and secure to front buckles on cover. |  |

**B. BACKREST COVER – 40 PORTION:**

- |  |  |
|--|--|
| 1) Remove headrests (see note below)   | 6) Apply side velcro to bottom flap (see note below)                               |
| 2) Release backrest from the back wall (see note below)                      | 7) Repeat on other side  |
| 3) Slip cover over backrest.   | 8) Adjust all velcro, straps and buckles to equalize tension and ensure a snug fit |
| 4) Tuck bottom of cover through crevice                                      | 9) Re-install headrest (see note below)  |
| 5) With backrest in down position locate strap and secure to buckle on cover |  |

**C. BACKREST COVER – 60 PORTION:**

- |  |  |
|--|--|
| 1) Remove headrests (see note below)   | 6) Apply side velcro to bottom flap (see note below)                               |
| 2) Release backrest from the back wall (see note below)  | 7) Repeat on other side  |
| 3) Slip cover over backrest. Ensure cover is installed under seat belt strap. Cover has allowance for latch. | 8) Pass Velcro tab under armrest and apply to bottom flap                          |
| 4) Tuck bottom of cover through crevice  | 9) Adjust all velcro, straps and buckles to equalize tension and ensure a snug fit |
| 5) With backrest in down position locate strap and secure to buckle on cover                                 | 10) Place backrest back to original position and lock (see note below)             |
|  | 11) Re-install headrest (see note below)   |

**D. ARMREST COVER**

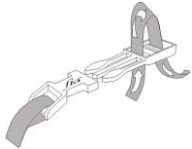 
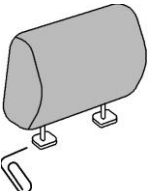 

- |  |  |
|--|--|
| 1) Place the armrest/storage compartment in down position                                    | 4) Snug the cover from top and bottom and place armrest into down position |
| 2) Slip cover over armrest, tuck back flap under armrest and apply side Velcro to back cover | 5) Adjust all velcro to equalize tension                                   |
| 3) Position adhesive velcro supplied to align with velcro on seat cover.                     |  |

**NOTE: BEFORE PLACING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**

**E. LID COVER**

- |                                       |  |
|---------------------------------------|--|
| 1) Open armrest / storage compartment | 3) Snug cover at back corners of the lid |
| 2) Slip Cover over lid                |  |

**NOTES:**

<p>1) <b>SELF-LOCKING SUPER-GRIP® BUCKLE:</b></p> 	<p>2) <b>SEAT BELT OPENING</b></p> <ul style="list-style-type: none"> <li>- Detach velcro pieces.</li> <li>- Slide cover under seat belt base</li> <li>- Re-attach velcro around seat belt base</li> <li>- Slip elastic loop over seat belt buckle</li> </ul>
<p>3) <b>HEAD REST REMOVAL:</b>          If the cushion is held up in ¾ position, the backrest will slant forward and make for easier removal.</p> <ul style="list-style-type: none"> <li>- Insert paper clip into holes at base to release</li> <li>- Lift off</li> </ul> 	<p>4) <b>BACKREST COVER BOTTOM FLAP INSTALLATION</b></p> 
<p>5) <b>RE-INSTALLATION OF HEADRESTS</b>          If the cushion is held up in ¾ position, the backrest will slant forward and make for easier re-installation.</p> <ul style="list-style-type: none"> <li>- Ensure pre-cut holes in seat cover align with holes in headrest base.</li> <li>- Replace headrests</li> </ul>	<p>6) <b>BACKREST RELEASE – 40 &amp; 60 PORTIONS</b></p> <ul style="list-style-type: none"> <li>- Lift the cushion to up position</li> <li>- The release mechanism is on the back wall</li> <li>- Locate the pull tab/cord to release backrest</li> <li>- Click sound indicates backrest is released.</li> </ul>
<p>7) <b>LOCKING BACKREST – 40 &amp; 60 PORTIONS</b></p> <ul style="list-style-type: none"> <li>- Push backrest back until you hear a click</li> </ul>	

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com