

INSTALLATION INSTRUCTIONS

WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY

ADJUSTABLE TRI-BALL MOUNT



PARTS LIST

| Item | Qty | Description |
|------|-----|--|
| 1 | 4 | Hitch pin |
| 2 | 4 | Clip |
| 3 | 1 | Shank assembly |
| 4 | 1 | Ball mount weldment |
| 5 | 1 | Anti-rattle bolt, 1/2" - 13, 1", grade 5 |
| 6 | 1 | Receiver tube assembly |

WARNINGS

Do not exceed vehicle's towing capacity or trailer hitch capacity, whichever is less. See your vehicle owner's manual to determine vehicle tow rating.

Weight ratings:

1 7/8" ball

5,000 lbs. gross trailer weight / 500 lbs. tongue weight

2" ball

7,500 lbs. gross trailer weight / 750 lbs. tongue weight


2 5/16" ball

10,000 lbs. gross trailer weight / 1,000 lbs. tongue weight

NOTES

Designed for use with class 4 and 5 hitches.

Periodically check your tow system to ensure that all fasteners are tight and that all structural components are sound.

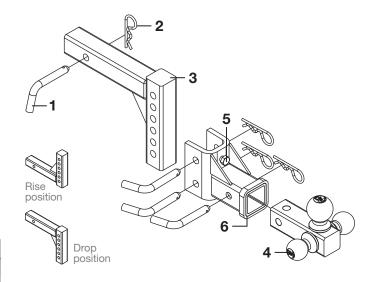

INSTALLATION

Prior to installation, assemble this unit so trailer will be level when hitched to tow vehicle.

Step 1

Insert the shank assembly (#3) into the receiver hitch and install the hitch pin & clip (#1 and #2). **Note:** Flip the shank assembly over for rise adjustments.

Step 2

Secure the receiver tube assembly (#6) to the shank assembly (#3) using two 5/8" hitch pins & clips (#1 and #2).

Step 3

Tighten the anti-rattle bolt (#5) to eliminate movement between the shank assembly and the receiver tube assembly.

Step 4

Insert ball mount weldment (#4), with required ball size pointing upward, into the receiver tube assembly (#6) and secure with a hitch pin & clip (#1 and #2).

Always attach safety chains between the trailer and tow vehicle.