



RHINO! HITCHSTEP
INSTALLATION INSTRUCTIONS
PART NO. 310B, 310C & 310PS



PARTS LIST

<u>QTY</u>	<u>PART DESCRIPTION</u>	<u>QTY</u>	<u>PART DESCRIPTION</u>
1	HITCHSTEP	1	KNOB
1	SLIDER TUBE	1	HITCH PIN
1	ANTI-RATTLE BRACKET	1	HITCH PIN CLIP
2	FINISHING CAP	1	STORAGE BAG


INSTALLATION

Step-1 Slide the slider tube over the HitchStep receiver tube. **Photo #1**

Step-2 Install the finishing caps onto the anti-rattle bracket and attach the anti-rattle bracket and knob to the slider tube. Leave the knob loose for final adjustment. **Photo #2**

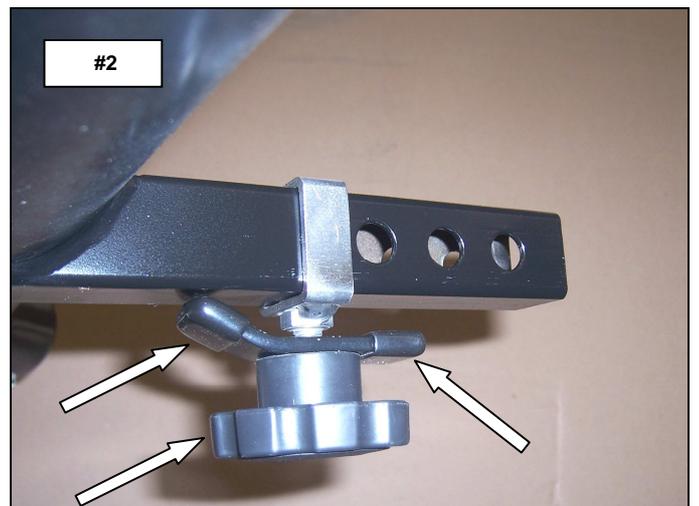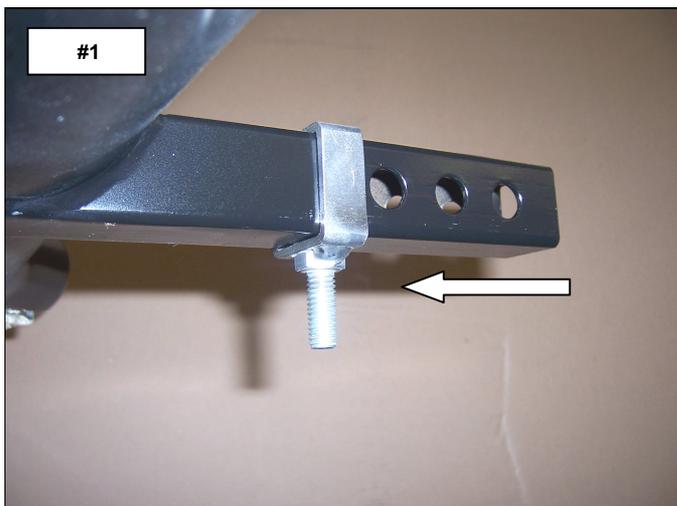

Step-3 Insert the HitchStep receiver tube into the vehicle hitch receiver at the desired position. Align the holes in the HitchStep receiver tube with the holes in the hitch receiver and install the hitch pin and clip. Position the anti-rattle bracket underneath the hitch receiver opening and hand tighten the knob. **Photo #3**

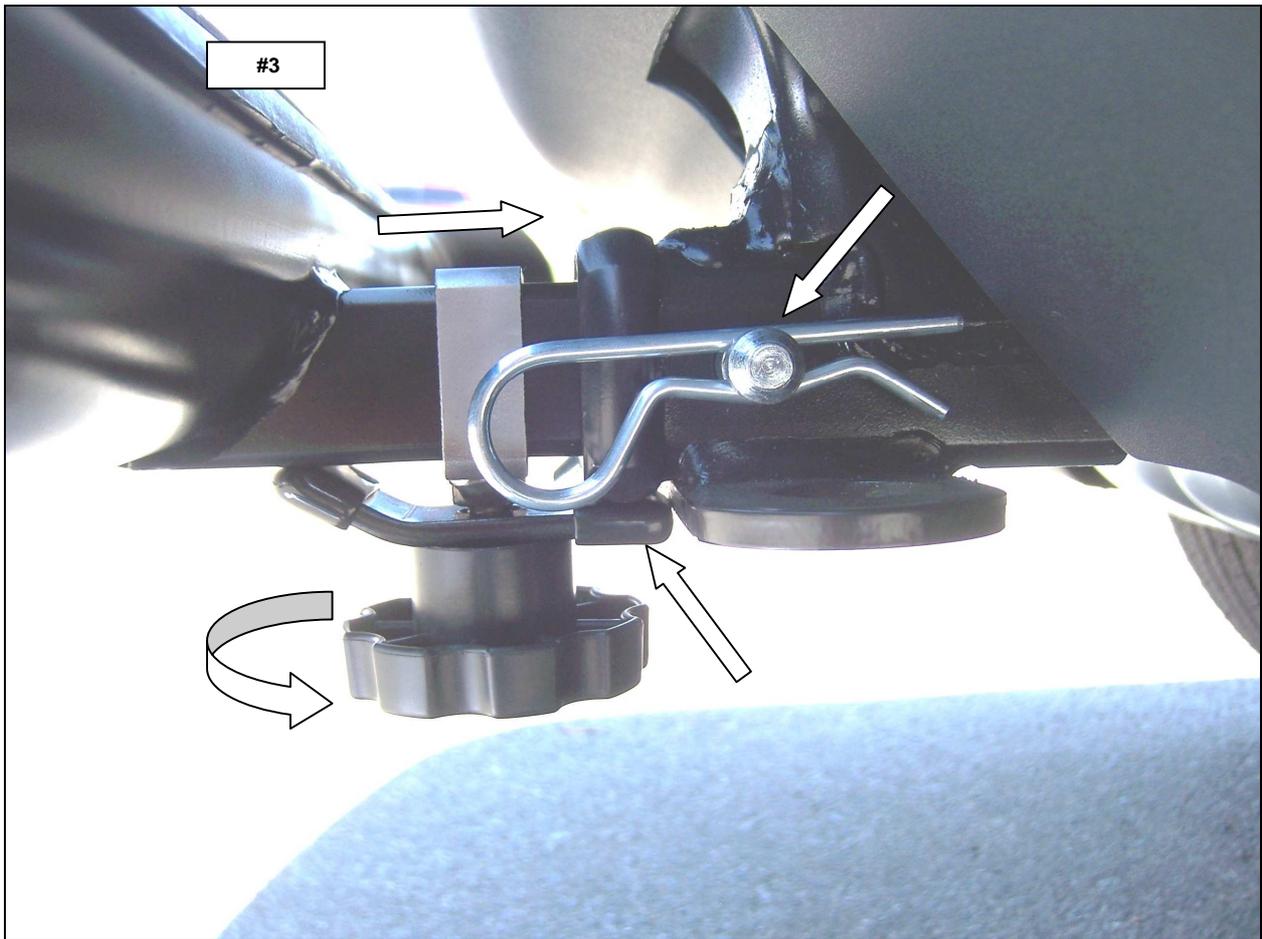

Note: You may prefer to use a locking hitch pin. The Hitchstep should be cleaned and cared for in the same manner that you clean and care for your vehicle. Do not use abrasive cleaners on the finish.

**FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888) 427-4466 FAX (714) 672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**