# CURT The FIRST Name in Towing Products The FIRST Name in Towing Products The Scan for helpful installation tipe in the Scan for helpful installation to thelpfu

## 51312 & 51313 APPLICATIONS

Make	Model
Ford	Bronco
Ford	F-Series

# **BRAKE CONTROL HARNESS**


# NOTICE 🗊

All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.

# **LOCATION GUIDE**

### **Representative vehicle shown below**

BH1 - Under dash, left of steering column, near emergency brake pedal

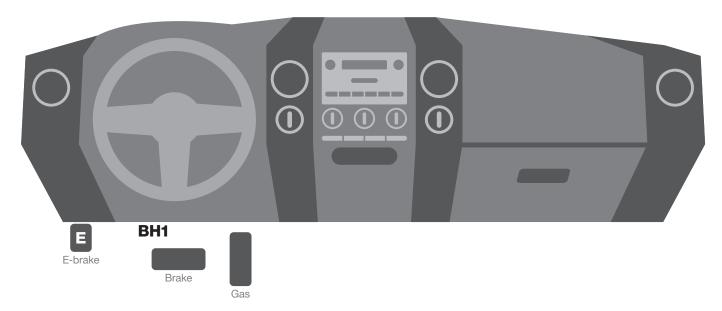

# INSTALLATION / SAFETY INSTRUCTIONS 🖽

#### Step 1

Locate the 4-pin, vehicle brake control harness connector under the dash, to the left of the steering column. It will be taped to another harness near the emergency brake pedal. The connector will be similar to that on the CURT brake control harness.

#### Step 2

Insert the connector on the CURT brake control harness into the vehicle connector. Make sure the connector is fully inserted with locking tabs in place.

#### Step 3

Insert the brake control harness's black connector into the brake control's quick plug connector. Secure the brake control harness with the provided cable ties, avoiding any pinch points.

#### Step 4

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.