



## WEATHERBEATER™ FLOOR LINERS

PT #9521

### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your Model Y. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

### INSTALLATION INSTRUCTIONS FOR YOUR TESLA MODEL Y FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. NEXT, REMOVE ANY EXISTING FLOOR MATS AND INSTALL THE VELCRO RETENTION DISCS INCLUDED IN THE PACKAGING. RETENTION DISCS INSTALLATION INSTRUCTIONS ARE ON THE BACK OF THIS PAGE. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE FRONT SEATS AS DESIRED.



## WEATHERBEATER™ FLOOR LINERS

PT #9521


### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new rear floor liner is custom molded to fit your Tesla Model Y. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

### INSTALLATION INSTRUCTIONS FOR YOUR TESLA MODEL Y SECOND SEAT FLOOR LINER

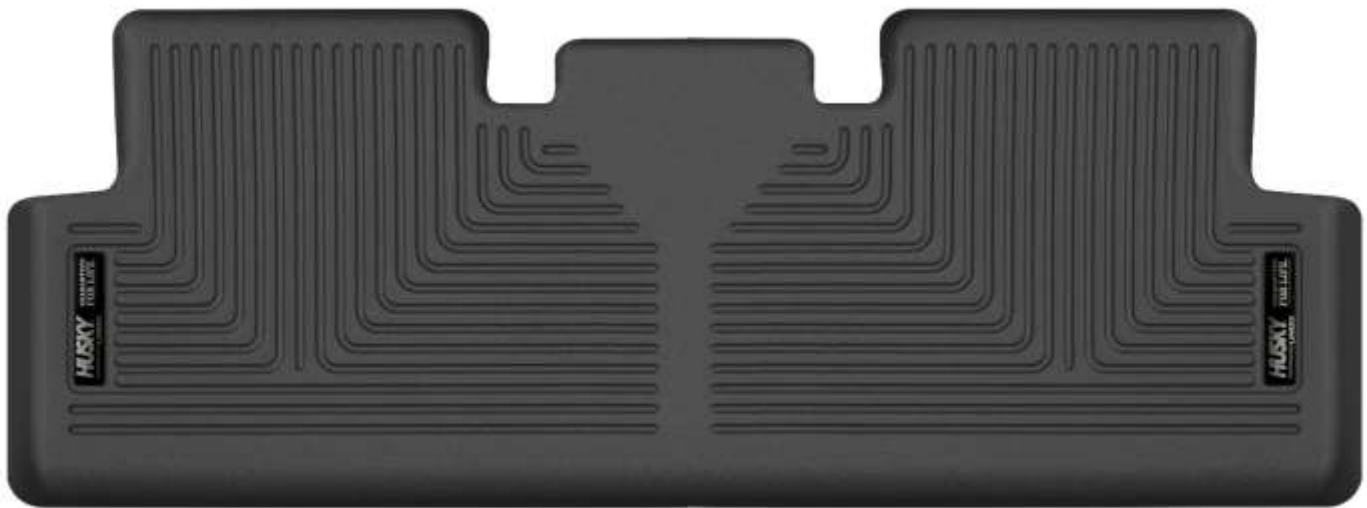

TO EASE INSTALLATION OF YOUR NEW 2<sup>ND</sup> SEAT LINER, MOVE BOTH FRONT ROW SEATS TO THEIR MOST FORWARD POSITION. WITH THAT DONE, INSTALL THE LINER AS SHOWN ABOVE. ONCE THE LINER IS IN PLACE, REPOSITION THE FRONT SEATS AS DESIRED.



# WEATHERBEATER™ FLOOR LINERS

PT #9521

## RETENTION DISC INSTALLATION INSTRUCTIONS

In the packaging your liners arrived in, please locate the hardware bag containing the four (4) retention discs with the Velcro® loop pad attached. The retention discs will be installed in your factory carpet to aid in securing your liners in place. The addition of the retention discs will not damage your carpet and they can easily be removed at any time.

To ensure that the anchors will align with the Velcro® pads on the back of the liner, first place the liners in the vehicle, adjusting them to the proper fit. Then, pull up a corner of your liner as shown in the photo below and attach the retention disc to the center of Velcro® pad on the liner. Lower the raised edge and note the position where the anchor screw touches the vehicle carpet. There are many ways to mark this location; here is one easy way:

- Apply a couple of strip of masking tape directly to the carpet underneath the retention disc. When the disc is lowered, it will pierce the tape and mark the location.

IMAGE 1 – RETENTION DISC ATTACHED TO  
VELCRO ON BACK OF LINER



IMAGE 2 – USING TAPE TO LOCATE  
RETENTION DISC ATTACHMENT POINT



IMAGE 3 – RETENTION DISC INSTALLED

