




PART NUMBER: F1785CC, F17100CC  
 F17105CC-6  
 PRODUCT: Hoop steps  
 APPLICATION: 2017-C FORD  
 F250/350 CREW CAB 6.5 BED

Parts Included:	Qty
Driver Side Step	1
Passenger Side Step	1
<b>Hardware</b>	
8mm nuts	18



**Step 1:** Starting with the Driver Side. Remove all 8mm flange nuts from the 8mm factory threaded studs to remove the OE running boards. Repeat for passenger side. (Fig.A).

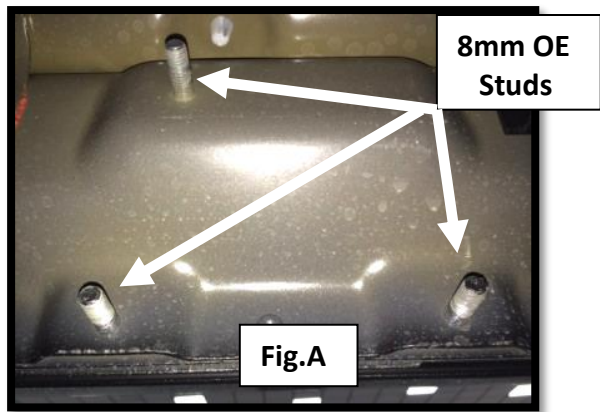


**Step 2:** Locate the driver Side Nerf-Sep. The two brackets that are closer together go toward the front of the vehicle.

**Step 3:** Carefully raise Nerf-Step into position and align the three brackets with the nine 8mm OE threaded studs. **NOTE: Be sure the front of the tube is in front of the plastic guard (Fig. B)**



**Step 4:** Using the supplied 8mm flanged nuts, fasten all nine mounting positions. Leave loose at this time. **(Fig.C)**

**Step 5:** Starting with the rear bracket, push up towards the pinch weld so the 3" main bar is as high and tight to the body as possible. Tighten the bottom left hand nut only. **(Fig C)**

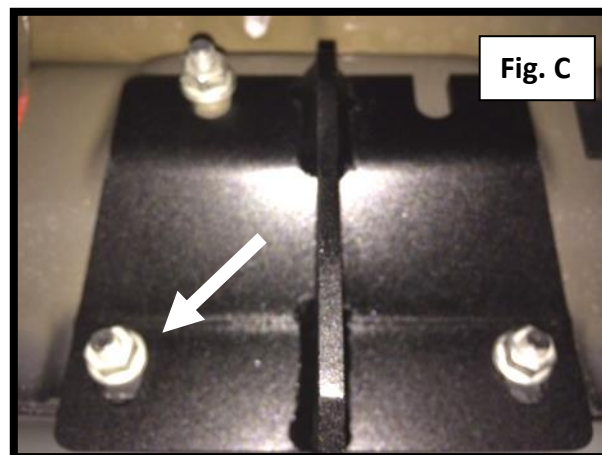



PART NUMBER: **F1785CC, F17100CC**  
**F17105CC-6**  
PRODUCT: **Hoop steps**  
APPLICATION: **2017-C FORD**  
**F250/350 CREW CAB 6.5 BED**

**Step 6:** Move to the front bracket and push tube up leveling with the back and fully tighten all three mounts. Next, fully tighten center bracket and then finish with the remaining mounts on the rear bracket.

**Step 7:** Repeat steps 3-6 for passenger side. Your install is now complete.

