

IMPORTANT:

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.


TOOLS REQUIRED:



Electric or re-chargeable
1/2" or 3/8" drill.



#15 Torque
screwdriver

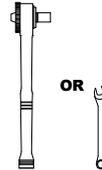


7/16" open wrench
or socket wrench




3/8" Socket Driver

KIT CONTAINS: PARTS BAG #755834

a) (1) Upper Mount
Rear, DS
Part #755826

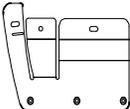

b) (1) Upper Mount
Rear, PS
Part #755827

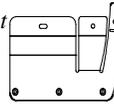

c) (6) Machine Screw
#8-32 x 7/8"
Part #012025



d) (6) Flat Washer
0.188" x 0.781"
Part #018018



e) (6) Nylock Nut
#8-32
Part #025005




f) (4) Flat Washer
0.281" x 1"
Part #018028



g) (2) Screw, Tek
1/4 x 1-1/4"
Part #010011




h) (1) Mount Clip
DS, Clinch Nut
Part #750582

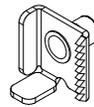

i) (2) Capscrew
1/4" - 20 x 1"
Part #014007





j) (1) Mount Clip
PS, Clinch Nut
Part #750584

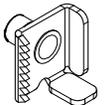

INSTALLATION: (For ease of installation, it is suggested that the wheel be removed)

- Before you install your mud flap set, see the diagram and parts list for all necessary parts. Cut protective plastic and peel away from stainless steel. Start on driver's side.
- Install the mud flap clip to the hole #1 with a capscrew and a flat washer then tighten screw until the bottom tab of the mud flap clip just passed through the bottom slotted hole of hole #1.
- Remove the factory screw on the wheel tub as shown on the diagram and reinstall factory screw on the hole #3 through the factory hole #4, loosely secure at this point. Ensure the the installed mud flap clip is behind the factory wheel well.
- Square the flap with the tire while putting pressure against the wheel well and tighten the factory screw on hole #3.

REMOVE THE FACTORY SCREWS
AND REINSTALL THROUGH THE
STAINLESS STEEL PANEL HOLE #3

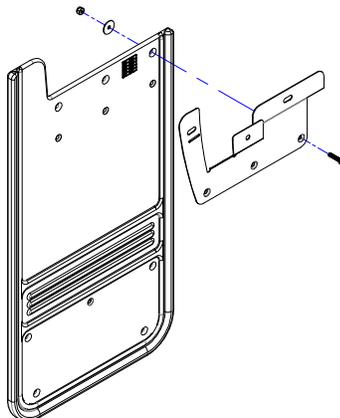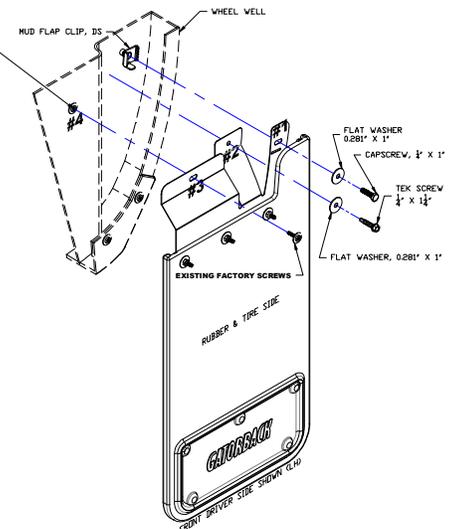

- Now secure the flap with a flat washer and a tek screw on hole #2 through the wheel tub.
- Secure the upper tab of the mud flap by sliding the installed mud flap clip on hole #1 to the wheel well until mud flap clip's teeth are gripped behind the wheel well then tighten the screw.
- Repeat procedure for the passenger side.

✓ **Check all fasteners for tightness. Repeat procedure on the other side.**