



# GATORBACK

## MUDFLAPS

# 2019 Jeep Cherokee Trailhawk

## Mud Flap Set, Rear

### Mounting Diagram & Instructions

Kit# GCR61R

### IMPORTANT:

*Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.*




### TOOLS REQUIRED-




Electric or Rechargeable Drill




1/4" Drill Bit



5/16" Open Wrench or Socket Wrench

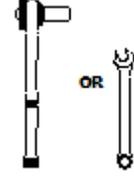


3/8" Open Wrench or Socket Wrench

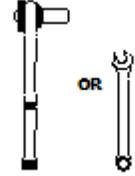


7/16" Open Wrench or Socket Wrench

### FLAPS

(1) Flap Assembly, Front, DS

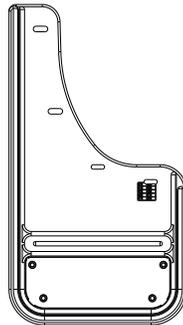


(1) Flap Assembly, Front, PS

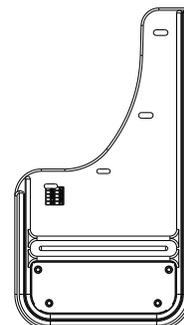

### PARTS BAG # 767605

a) (2) Screw, Mach. 18-8SS, 10-24x1", Hex Hd  
Part # 012022




b) (4) Capscrew, SS 1/4"-20 x 3/8" Blk Ox  
Part # 014069




c) (2) Screw, Sht Metal, SS 1/4"-Hex Washer Hd #8-18 x 2"  
Part #016051




d) (4) Washer, Flat 0.203" x 0.781", SS  
Part #018018



e) (2) Washer, Flat 0.203" x 1.5", SS, Blk Ox.  
Part #018072



f) (4) Washer, Flat 0.281" x 1" SS, Blk Ox  
Part #018069



g) (2) Washer, Lock 18-8, SS, 10  
Part #024001



h) (2) Nut, Hex #10-24, SS  
Part #025003



i) (4) Spring Nut 1/4"-20, 27/38" Reach  
Part #028006



j) (2) Spacer, Nylon 1/2" x 1/4" x 7/8"  
Part #054082




### INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the driver's side.
2. Remove the factory fender screw from hole #7
3. Install mud flap through hole #3 into factory hole #7 using a sheet metal screw (016051), a black washer (018072) and a spacer (054082)
4. Temporarily square the flap using a square or other levelling tool.



5. Mark the fender through mud flap holes #1 & #2.
6. Place spring nuts over marked spots on the fender.
7. Loosely secure mud flap holes #1 & #2 to spring nut holes #5 & #6 using a 1/4" screw (014069) and a black washer (018069)
8. Square the flap using a square or other levelling tool.
9. Drill a 1/4" hole through mud flap hole #4 into the plastic liner to create hole #8
10. Install mud flap hole #4 to liner through hole #8 using a machine screw (012022) and flat washer (018018) and secure using a flat washer (018018), lock washer (024001) and hex nut (025003).
11. Tighten all fasteners
12. Repeat procedure for passenger side.

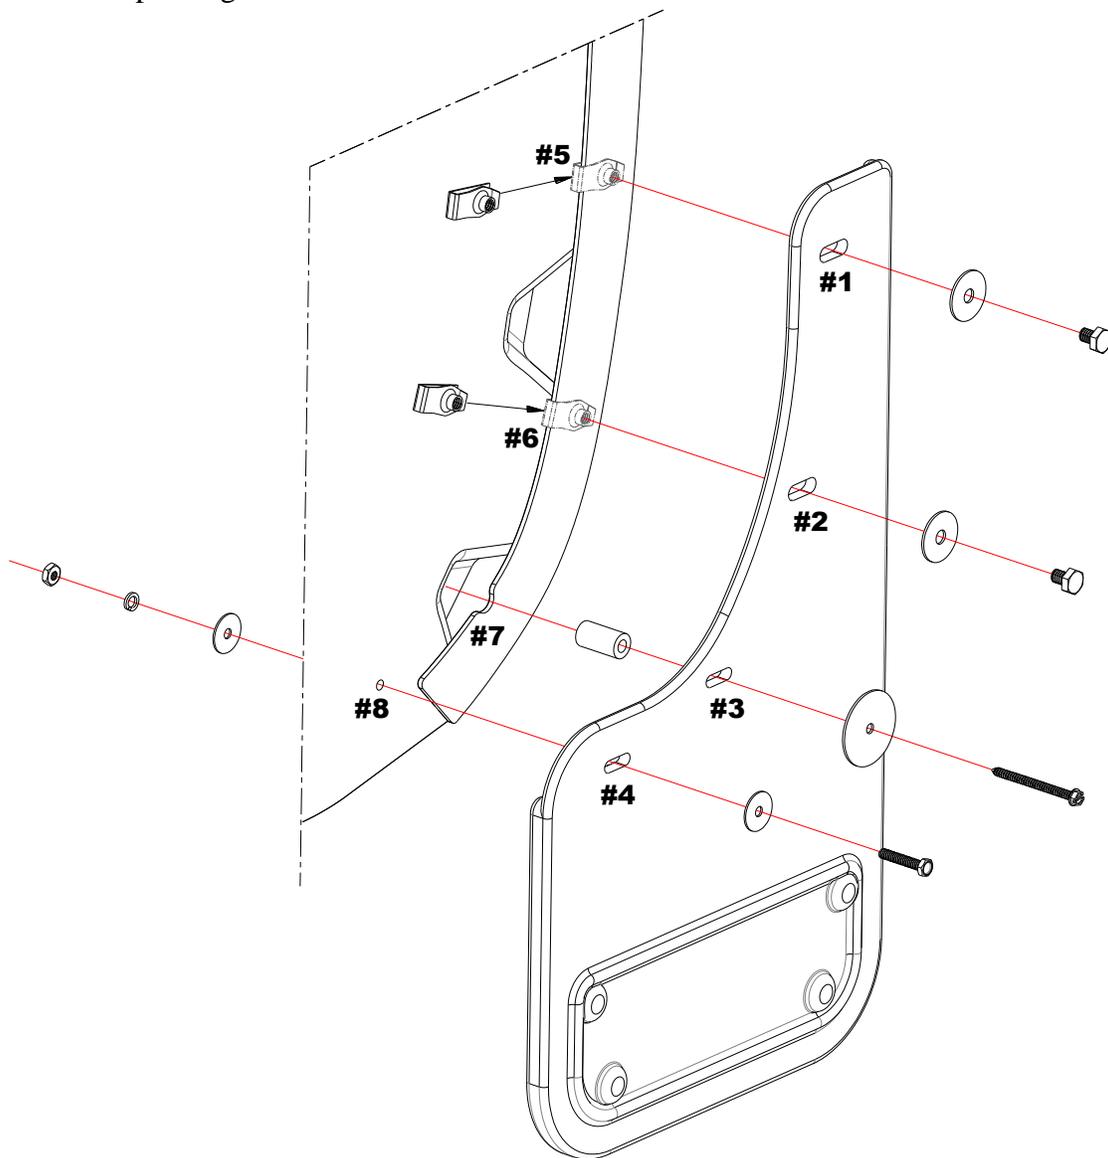

Please check out our YouTube channel to see an install video for this application.

