

I-SHEET PART NUMBER: INST-00306
 PART NUMBER: **HPF2172B**
 PRODUCT: **PODIUM HOOP STEP**
 APPLICATION: **FORD BRONCO 4DR**


HARDWARE DESCRIPTION		QTY.
HWKT-04239X		
FHLB 04240X	M10x25mm HEX FLANGED BOLT	12
	M10 CARRIAGE BOLT	12
	M10 FLANGED HEX NUT	12



PARTS INCLUDED		QTY
DRIVER SIDE STEP		1
PASSENGER SIDE STEP		1
MOUNTING BRACKET		6


DO NOT USE IMPACT TOOLS

Step 1. Identify driver side step.

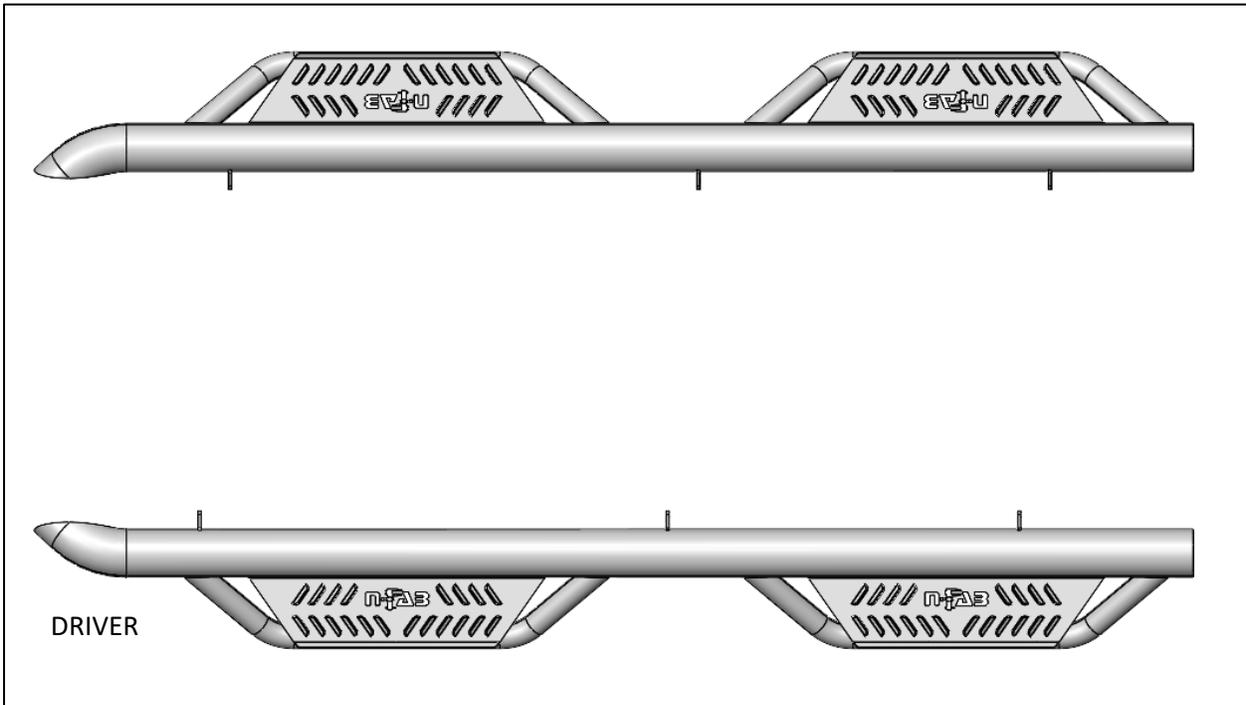

Step 2. Using the supplied M10 carriage bolt and nut, install the (x6) mounting brackets to each attachment point on the main tube and leave loose for now.

****** NOTE:** *The brackets will attach to the backside of the mounting flange with the threaded end of the carriage bolt facing towards the REAR of the step. *****

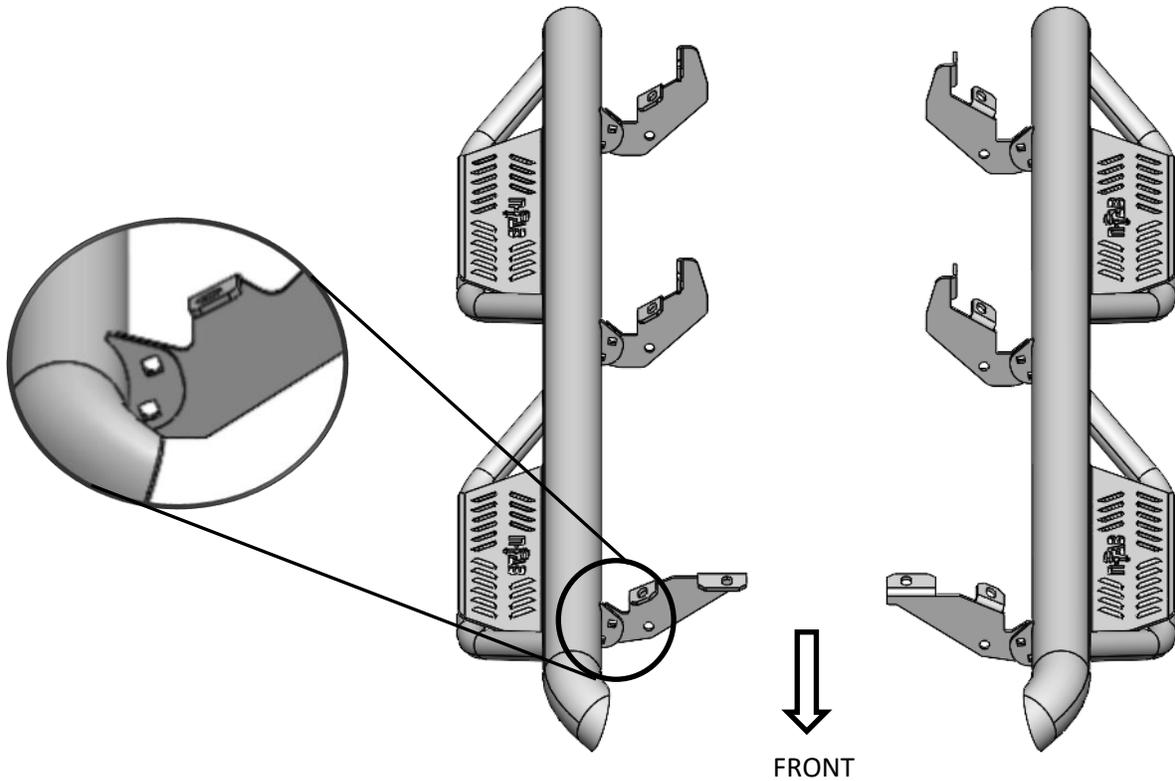

Step 3. Remove any factory running boards or hardware and discard.

Step 4. Clean/tap the three factory threaded mounting locations.



Step 5. Carefully place step into place and loosely fasten using the supplied M10X25mm hardware.



Step 6. Next, tighten the three lower bolts first following with the three upper bolts.
Step 7. Finish by tightening the (x3) mounting brackets at the main tube.
Step 8. Repeat steps 3-7 for passenger side.
Step 9. Your install is now complete.

