




DESERT BORN, ROAD READY.™

PART# TSN22CC-TX  
2022-23 FRONTIER CC

TRAIL SLIDER  
INST- 02163

## Components and Hardware: HWKT-00031X

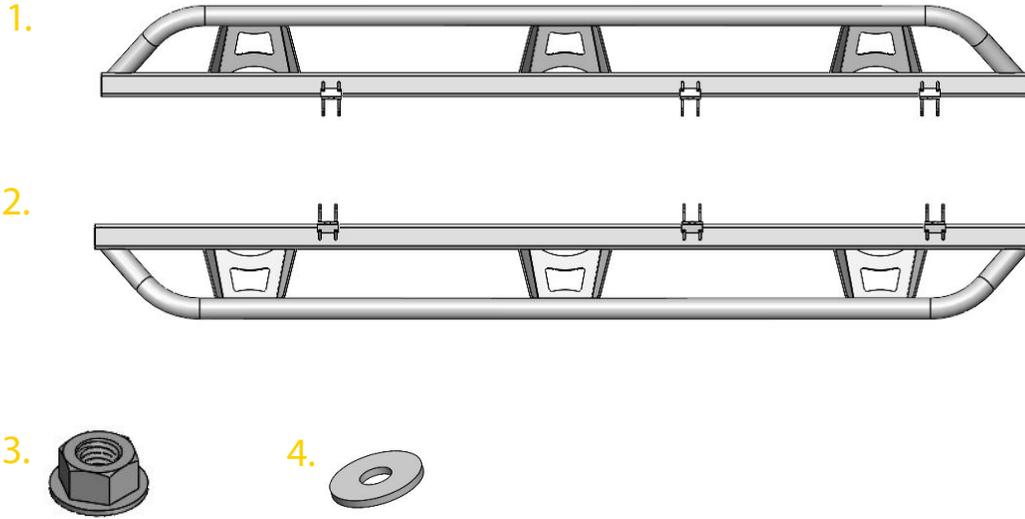

## Components and Hardware:

- 1. Driver side rail.....(1)
- 2. Passenger side rail.....(1)
- 3. M8 Flanged hexnut.....(12)
- 4. M8 flat washer.....(12)

## Tools for Installation:

- 13mm socket
- Ratchet wrench

## INSTALL

Step 1. Remove any OE step/running boards from the vehicle and discard.

Step 2. Clean any undercoating or debris from the threaded studs.



Step 3. Next, place (#1) Driver side on the studs and secure with supplied (#3,#4) M8 flanged hex nut and M8 flat washer and loosely tighten for now.

Step 4. After final adjustment fully tighten (x3) brackets to the factory body mounts to (15-20 ft/lbs torque).

**NOTE:** Insure Trail Slider is pushed up against the lower shoulder of the body, under the mounting studs before completely tighten.

Step 5. Repeat process with passenger side Slider

