


Components and Hardware:

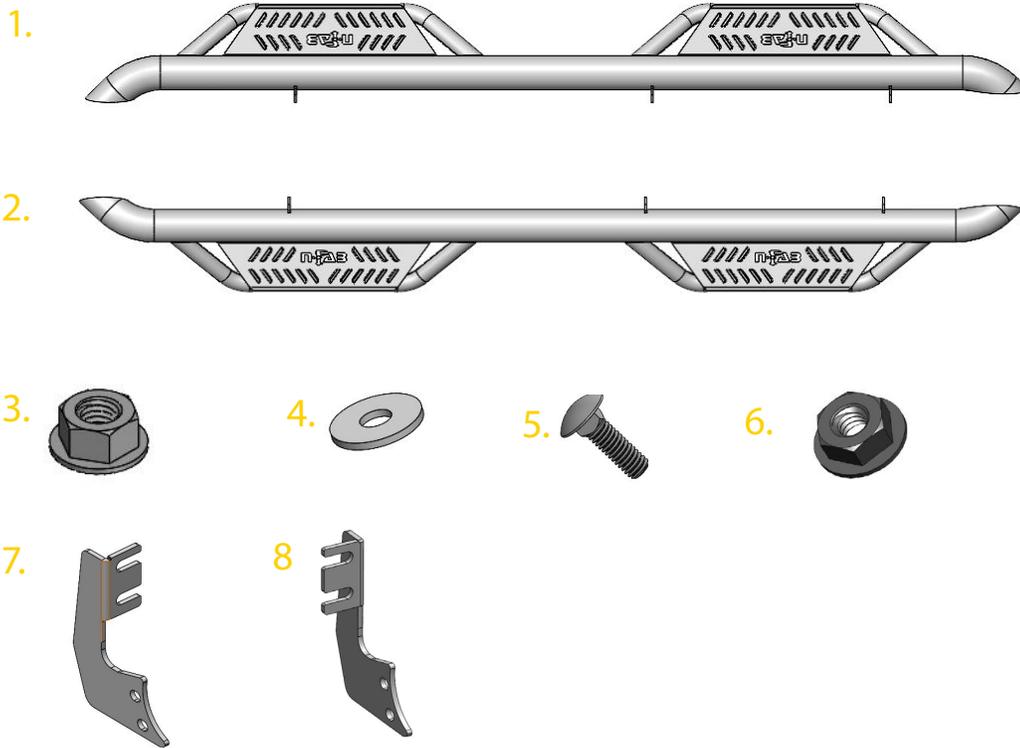

Components and Hardware:

1. Driver side step.....	(1)
2. Passenger step.....	(1)
3. M8 hex nut.....	(12)
4. M8 flat washer.....	(12)
5. M10x25mm carriage bolt.....	(12)
6. M10 flanged hex nut.....	(12)
7. Driver side bracket.....	(3)
8. Passenger side bracket.....	(3)

Tools for Installation:

- 13mm socket
- 16mm socket
- Ratchet wrench



DESERT BORN, ROAD READY.™


PART# HPN2273CC-TX
2022-22 FRONTIER CC

PODIUM HOOP STEP
INST-

INSTALL

Step 1. Attach mounting bracket (x3) (# 7) to (#1) driver side step and loosely secure with (x6) (#5) M10 carriage bolt and (x6) (#6) flanged hex nut.

Step 2. Attach mounting bracket (x3) (#8) to (#2) passenger side step and loosely secure with (x6) (#5) M10 carriage bolt and (x6) (#6) flanged hex nut.

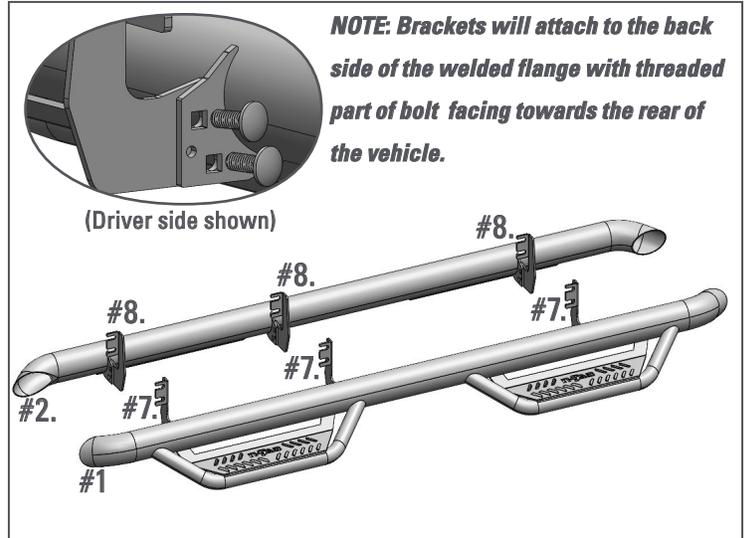

Step 3. Carefully raise Podium step up into position aligning brackets with OE threaded studs and secure with (x6) (#3) M8 hex nut and (x6) (#4) M8 flat washer and hand tighten for now.

Step 4. After final adjustment, tighten (X3) (#7) upper mounts at (18-20 ft/lbs) of torque.

Step 5. Finish by tightening the (x3) (#7) brackets at the main tube at (32-37 ft/lbs) of torque.

Step 5. Repeat process with passenger side.

