



**INSTALLATION INSTRUCTIONS**  
**1997-2003 Dodge Dakota**  
**1998-2003 Dodge Durango**  
**Part # 45-0140, 40-0145**


**PART LIST**

|   |  |
|---|--|
| 1 | Grille Guard                             |
| 2 | Mounting Brackets                        |
| 1 | Driver Side Top Bracket                  |
| 1 | Passenger Side Top Bracket               |
| 4 | M12*30 Hex Head Bolt, Stainless Steel    |
| 8 | M12 Flat Washer, Stainless Steel         |
| 4 | M12 Lock Washer, Stainless Steel         |
| 4 | M12 Hex Nut, Stainless Steel             |
| 2 | M10*30 Button Head Bolt, Stainless Steel |
| 4 | M10 Flat Washer, Stainless Steel         |
| 2 | M10 Lock Washer, Stainless Steel         |
| 2 | M10 Hex Nut, Stainless Steel             |

**Note:** Westin Automotive advises the installer to use a thread lubricant on all stainless steel fasteners.

**PROCEDURE**

1. Remove plastic spoiler beneath front bumper if so equipped. Loosen the two factory nuts directly behind the bumper. The bolt pattern on the frame mounting brackets will be positioned in a manner shown in Figure 1. Attach frame mounting brackets using factory nuts as shown in Figure 2. Attaching top brackets open vehicle hood and use the existing bolts as shown in Figure 3.
2. Line up the two holes on the lower portion of the front bar with the two holes on the mounting frame brackets (outer edge) fasten using the M12 hardware. Once the front bar is attached to the mounting brackets, level and adjust the Grille Guard.
3. Once you are satisfied, attach the top mounting brackets using the M10 hardware and the existing top bumper bolts. Tighten all fasteners.

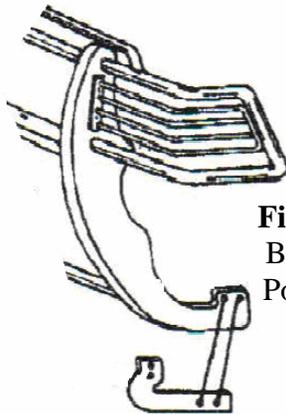

**Figure 1**  
Bracket  
Position

**Figure 2**



Driver Side Lower Bracket

**Figure 3**



Passenger Side Upper Brace



Westin Automotive Products, Inc.  
5200 N. Irwindale Ave. Suite 220  
Irwindale, Ca. 91706

Thank You for choosing Westin products  
For additional installation assistance please call  
Customer service (800) 793-7846 or (507) 375-3559