



## Installation Instructions:


N-Fab

Nerf-Steps

N0570CC-TX

N0570CC

NISSAN  
2005-2017  
FRONTIER CREW CAB

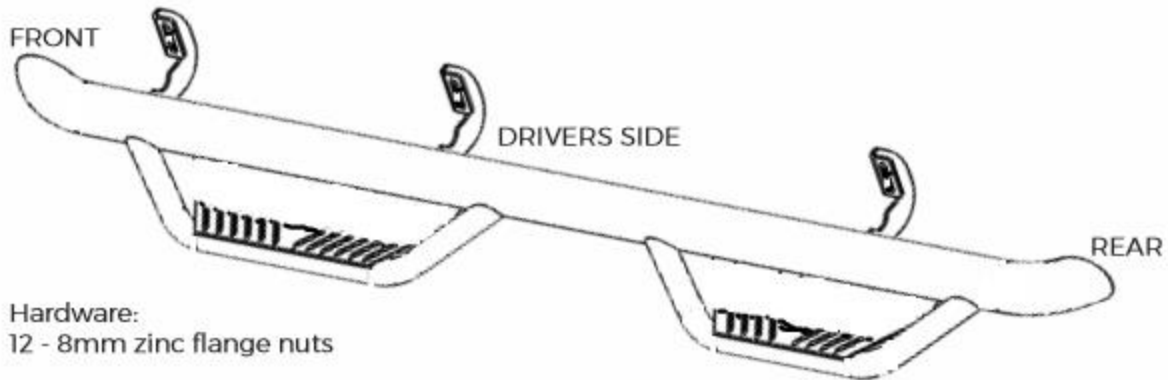

Hardware:  
12 - 8mm zinc flange nuts

**STEP 1:**  
Identify the driver and passenger bars. The center bracket is closer to the front of the truck.



**STEP 2:**  
Each mounting bracket consists of holes that mount to the OE studs.



**STEP 3:**  
Remove OE boards if equipped then locate mounting studs. Clean any dirt and debris from mounting studs and surface.



**STEP 4:**  
Carefully place step onto Place. Secure mounting holes over OE studs. Best to have a assistant to lift and hold board in place. Now hand tighten nuts to OE studs.



**STEP 5:**  
Begin tightening bolts in a alternating pattern. **Avoid using power or air tools.** Over tightening could stripe or break the OE threaded inserts.



**STEP 6:**  
Tighten to 20ft lbs torque to secure the board to the truck. Repeat the same procedure to the other side.



N-FAB Inc.

281-880-6322 | 866-806-6322 (Toll Free) | info@n-fab.com | www.n-fab.com