


KIT INCLUDES:

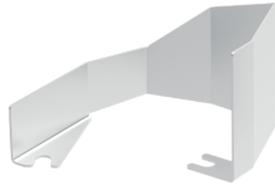


Driver Side
Part#702516




Passenger Side
Part #702517

TOOLS:

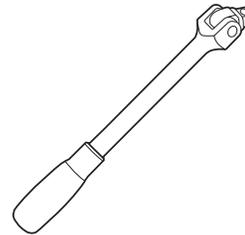



1/2" Drive Breaker Bar





24mm Socket Wrench

INSTALLATION INSTRUCTIONS

1. While removing the tire is not necessary for this install, it may make it easier. We have done so here for clearer images.
2. Loosen the 2 caliper mounting bolts to the differential using a 1/2" drive breaker bar & 24mm socket.

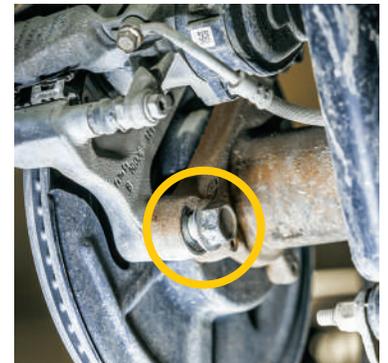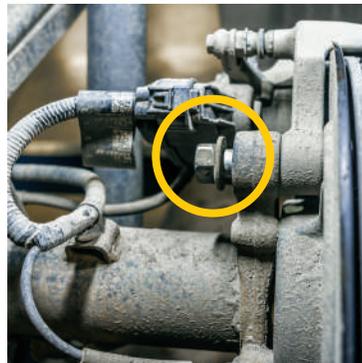

3. Position the guard in front of the train axle & slide the top open tab hole of the guard into the top caliper bolt. Swing the bottom open tab hole of the guard into the bottom caliper bolt. (*Please note: it's important to install the top mount first).

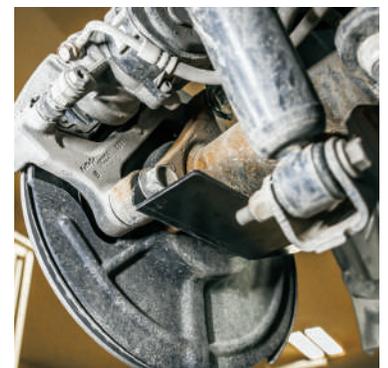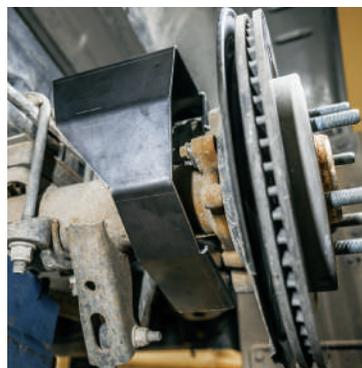

4. Ensure to make the two open tab holes sit against the caliper bolts before re-tightening the bolts to the factory specs.