



# 2014 GMC Rear Mounting Bracket Mounting Diagram & Instructions Part# 756802

## IMPORTANT:

**The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**

## TOOLS REQUIRED:




Electric or re-chargeable  
1/2" or 3/8" drill.



#15 Torque  
screwdriver



3/8" Socket Driver

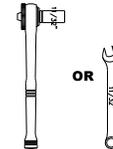


7/16" wrench  
or socket wrench




#2 Phillips  
Screwdriver

## KIT CONTAINS: PARTS BAG #755834

a) (1) Upper Mount  
Rear, DS  
Part #755839

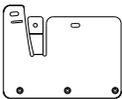

b) (1) Upper Mount  
Rear, PS  
Part #755840

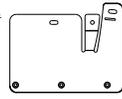

c) (6) Machine Screw  
#8-32 x 7/8"  
Part #012025



d) (6) Flat Washer  
0.188" x 0.781"  
Part #018018



e) (6) Nylock Nut  
#8-32  
Part #025005




f) (4) Flat Washer  
0.281" x 1"  
Part #018028



g) (2) Screw, Tek  
1/4 x 1-1/4"  
Part #010011




h) (1) Mount Clip  
DS, Clinch Nut  
Part #750582

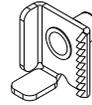

i) (2) Capscrew  
1/4" - 20 x 1"  
Part #014007





j) (1) Mount Clip  
PS, Clinch Nut  
Part #750584

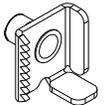

## INSTALLATION (For ease of installation it is suggested that the wheel be removed)

1. Before you install your mud flap set, see the diagram and parts list for all necessary parts. Cut protective plastic and peel away from stainless steel. Start on driver's side.
2. Install the mud flap clip to the hole #1 with a capscrew and a flat washer then tighten screw until the bottom tab of the mud flap clip just passed through the bottom slotted hole of hole #1.
3. Remove the factory screw on the wheel tub as shown on the diagram and reinstall factory screw on the hole #3 through the factory hole #4, loosely secure at this point. Ensure the the installed mud flap clip is behind the factory wheel well.
4. Square the flap with the tire while putting pressure against the wheel well and tighten the factory screw on hole #3.

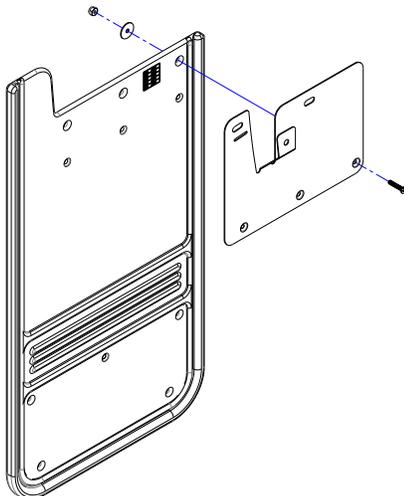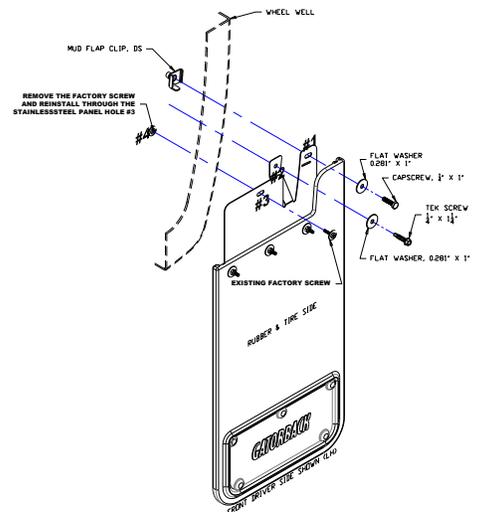

5. Now secure the flap with a flat washer and a tek screw on hole #2 through the wheel tub.
6. Secure the upper tab of the mud flap by sliding the installed mud flap clip on hole #1 to the wheel well until mud flap clip's teeth are gripped behind the wheel well then tighten the screw.
7. Repeat procedure for the passenger side.

✓ **Check all fasteners for tightness. Repeat procedure on the other side.**