NOTICE
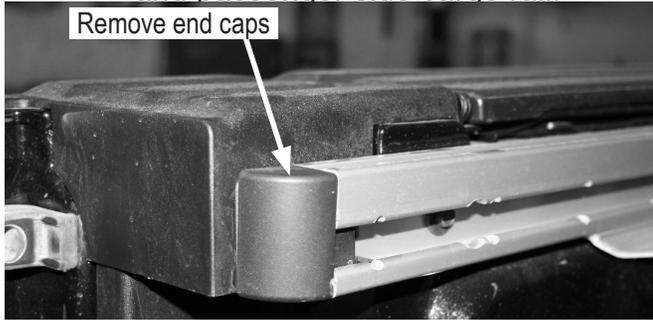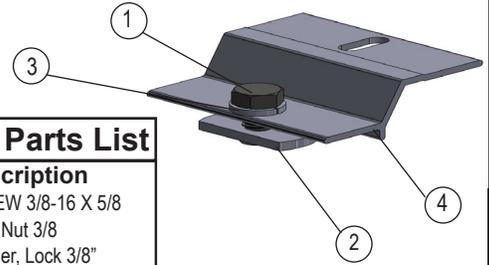
ASSEMBLY OF DODGE RAMBOX™ COVER TO TRUCK

STEP 1. Remove the end caps from the driver and passenger side cargo rail.

Remove end caps

**STEP 2.** Assemble hardware as shown.

1
3
2
4

Replacement Parts List

Item	Part #	Description
1.	1704353	SCREW 3/8-16 X 5/8
2.	1704373	Weld Nut 3/8
3.	1704374	Washer, Lock 3/8"
4.	1704246	Clamp Bracket Rambox

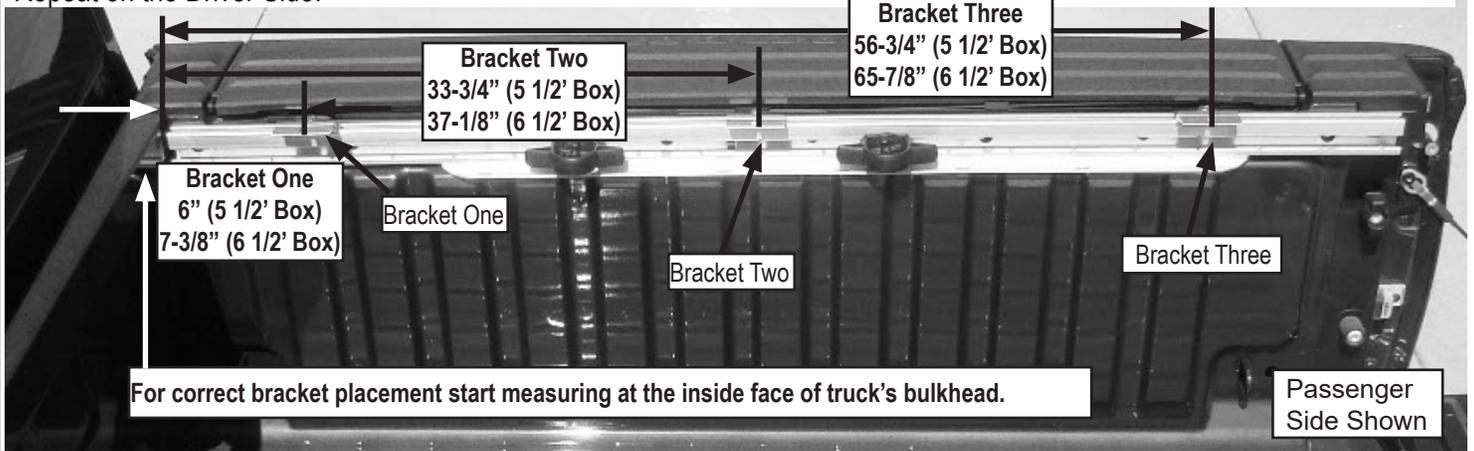**STEP 3.** Slide three assembled brackets into each track of the driver and passenger side cargo rail.

Weld nut shown inside the top track of cargo rail.

Top track of cargo rail

Cargo Rail
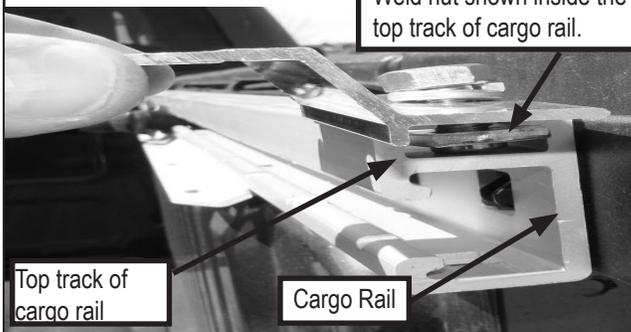
STEP 4. Apply corner seal to front inside corners of box.

Corner Seal
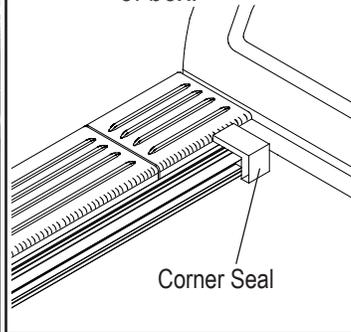
STEP 5. Apply weather seal across the front bulkhead, trimming ends to match bed cap contour.

Weather seal 1117838
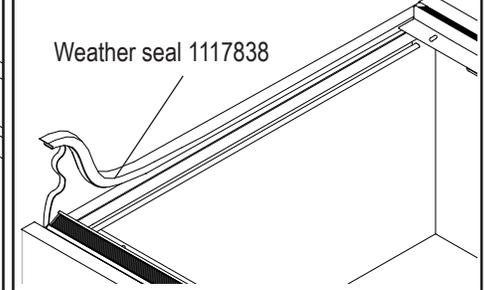
STEP 6. Starting from the front bulkhead of the Rambox™ place brackets at the dimensions shown and then tighten. Repeat on the Driver Side.

Bracket Three
56-3/4" (5 1/2' Box)
65-7/8" (6 1/2' Box)

Bracket Two
33-3/4" (5 1/2' Box)
37-1/8" (6 1/2' Box)

Bracket One
6" (5 1/2' Box)
7-3/8" (6 1/2' Box)

Bracket One

Bracket Two

Bracket Three

For correct bracket placement start measuring at the inside face of truck's bulkhead.

Passenger Side Shown

STEP 7. Fasten the Sentry rail to the brackets with the hardware shown.

Sentry Rail

1
2
3
4
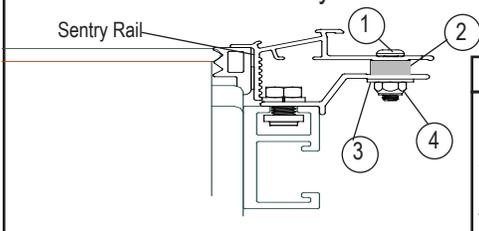
Replacement Parts List

Item	Part #	Description
1.	1706072	SCREW 1/4-20 X 1
2.	1706073	Spacer
3.	1700427	Washer 1/4
4.	1701543	Nut 1/4-20

NOTE: If your rail is tilting inward or sitting to high make sure your rail is sitting beside bolt head as shown and NOT ON TOP.

Properly installed rail
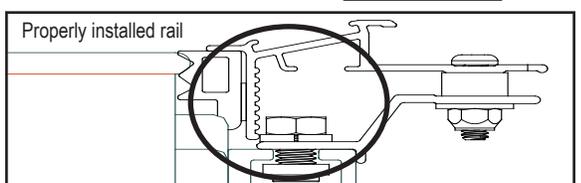
STEP 8.

Follow steps 1 through 6 to mount the driver side rail. After the side rails are attached insert the plastic cargo rail end caps. Refer to the owners manual for instructions on how to attach the cover assembly and for other operations of the truck bed cover.

ADDITIONAL SEALING AROUND TAILGATE

STEP 1. Apply seal 1118531 to bed caps as shown in the next two steps to help seal gap between bed cap and tailgate.

Replacement Parts List

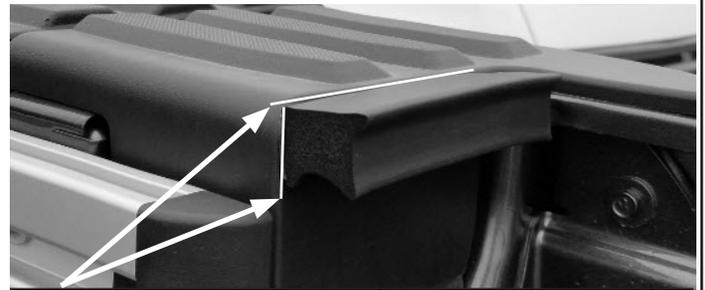| Item	Part #	Description
1.	1118531	EXTRUDED WEATHER SEAL_RBR_4.50
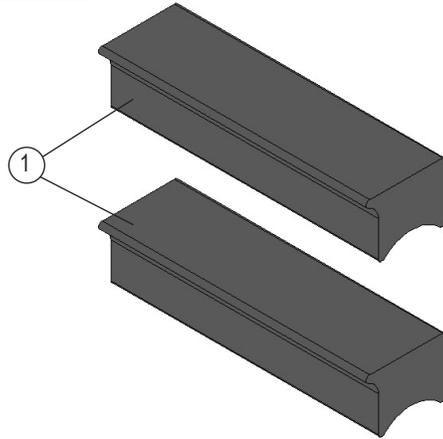
STEP 2. Once cover Rails are installed, clean the area shown below on Driver and Passenger side with wet rag.

Clean this area.

STEP 3. Apply Seal on Driver and Passenger Side as shown below.

Align seal flush along the top edge of the bed cap and the inner edge as shown.