



RHINO-RACK

Aerodynamic & Heavy Duty Roof Rack Systems

S400-FK5 EUROPEAN Bar 32mm x 22mm & YAKIMA Bar.


Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the cross bars are installed in the correct locations.
Check the contents of kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.

Parts List


Maximum carrying capacity: 35kg.

Item	Component Name	Qty.	Part No.
1	Yakima Bar "U" Adaptor Block	4	M082
2	M6 U-Bolt	4	C064
3	European Bar "U" Adaptor Block	4	M083
4	M6 x 16mm x 1.6mm Flat Washer	8	W031
5	M6 Plastic Knob	8	N008
6	Fitting Instruction	1	RS-380


Tools Required: Measuring tape.

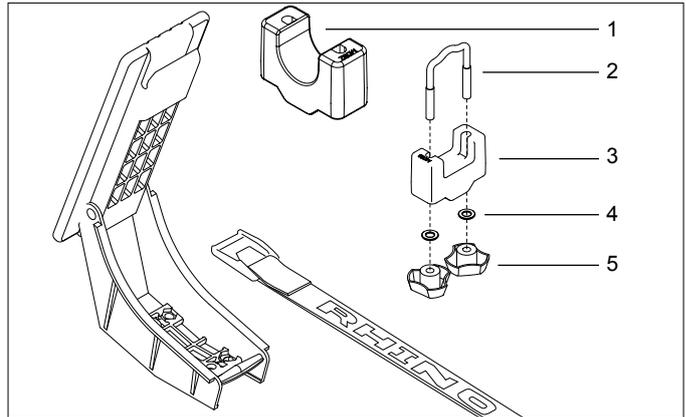


1 Insert the U-bolt through the kayak/canoe carrier mounting holes (front or back holes).

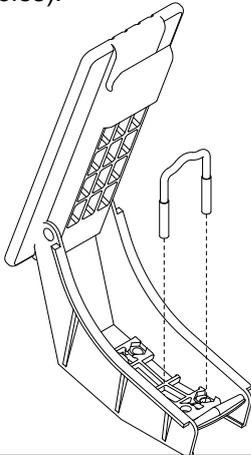

2 Place the carrier with U-bolt over the cross bar. Attach adaptor block, flat washers and knobs onto the U-bolt.

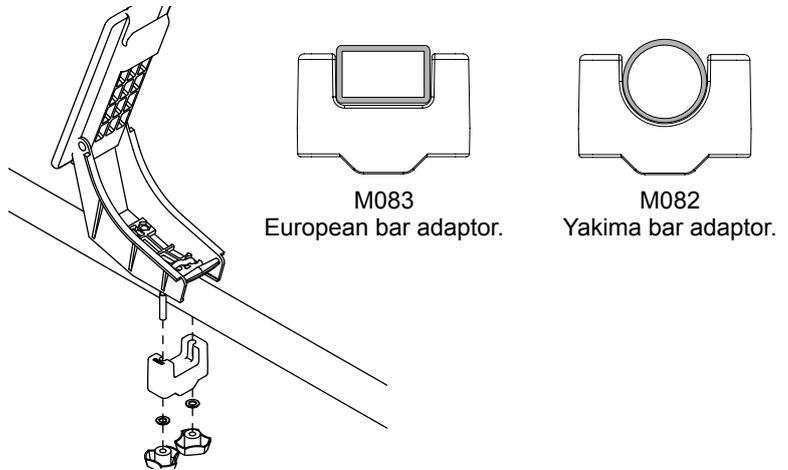


3 Adjust the carriers to suit the kayak or canoe, then tighten the knobs to secure the carriers.

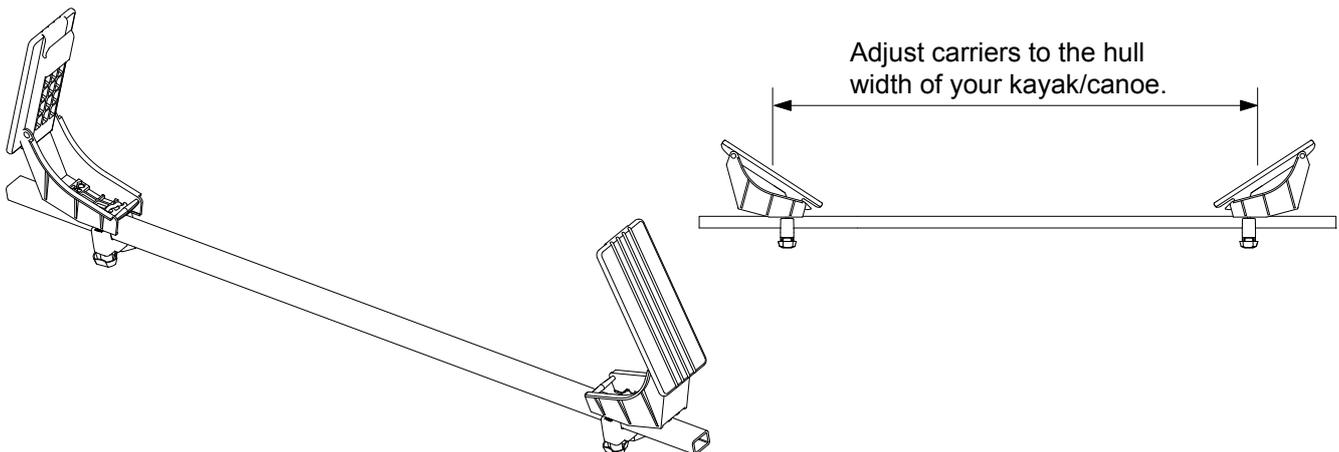


Kayak/Canoe Carrier Loading Instruction

1 Insert the rubber support pad by bending and feeding it onto the carrier housing.

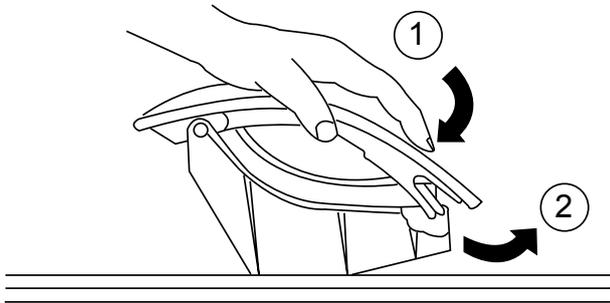

2 Below are the two angles in which the carriers can be fitted. Use the most appropriate position to suit your kayak/canoe. When using the tie down straps provided secure around the cross bar. Double check to make sure all straps are secure.

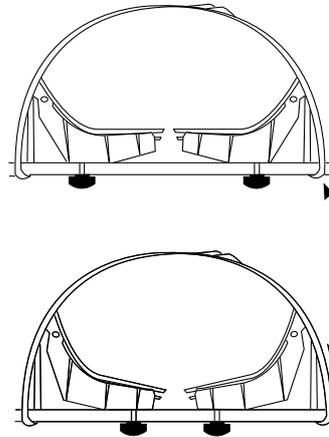


Straps must be secured around the cross bar.

Maximum carrying capacity: 35kg.

Long Load Instruction

Long canoe's must be secured front and rear with the long straps supplied.

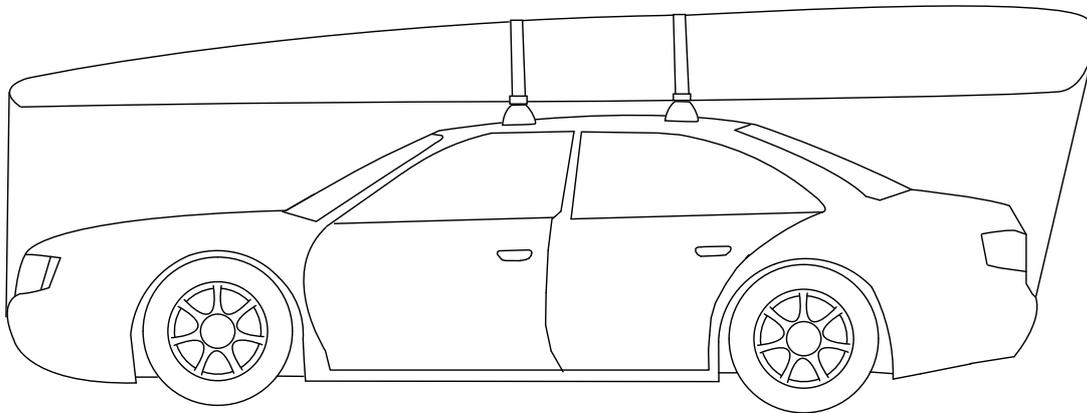

Please Note: The maximum permissible roof load must not be exceeded (see vehicle hand book for details of the maximum roof load). The roof load comprises the weight of the basic rack plus the additional accessory and load itself. Check that the rack system is securely fitted before each trip and at regular intervals.

Sensitivity to cross winds, behaviour in curves and braking:

The handling of the vehicle changes when transporting a load on the roof. For safety reasons, we recommend you exercise extreme care transporting wind resistant loads.

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744
(Fax) (02) 9638 4822

Document No: RS-380
Prepared By: Craig Jones
Authorised By: Gary England

Issue No: 02
Issue Date: 15/07/2009

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.