

13284 INSTALLATION INSTRUCTIONS

Safety glasses should be worn at all times while installing this product.

YEARS: 2016-CURRENT

MAKE: MAZDA

MODEL: CX-9

STYLE: SUV



WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY For more information log onto www.curtmfg.com & for helpful towing tips log onto www.hitchinfo.com

WEIGHT CARRYING:

TRAILER WEIGHT: 4000 LBS. TONGUE WEIGHT: 600 LBS.

WEIGHT DISTRIBUTION:

TRAILER WEIGHT: 4000 LBS. TONGUE WEIGHT: 600 LBS.

PRO INSTALL TIME: 30 MIN. NOVICE INSTALL TIME: 60 MIN.

IF YOU ARE HESITANT TO UNDERTAKE
THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED
CURT INSTALLER FOR ADDITIONAL ASSISTANCE.

INSTALLATION TIPS:

- 1. BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
- 2. TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
- 3. USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.
- 4. NEED HELP OR HAVE SOME QUESTIONS? CALL TECHNICAL SUPPORT AT 877.287.8634

INSTALLATION REQUIRES: 10mm 3/4" TORQUE WRENCH 6" SCREW DRIVER SOCKET EXTENSION SAFETY GLASSES

LEVEL OF DIFFICULTY: EASY

LOWER EXHAUST



LOWER TRIM PANEL REMOVAL



FISHWIRE HARDWARE



REVERSE FISHWIRE HARDWARE




NO DRILL APPLICATION

VEHICLE PHOTO:



REPRESENTATIVE PHOTO

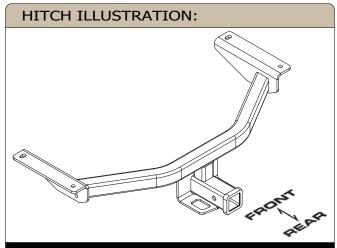

MAKE SURE YOUR HITCH MATCHES




SCAN FOR MORE INFO PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE ALL FASTENERS ARE TIGHT AND ALL STRUCTURAL COMPONENTS ARE SOUND

CURT Manufacturing LLC. warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC. may repair or replace the product at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.


For more information log onto www.curtmfg.com

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.

INSTALLATION WALKTHROUGH:

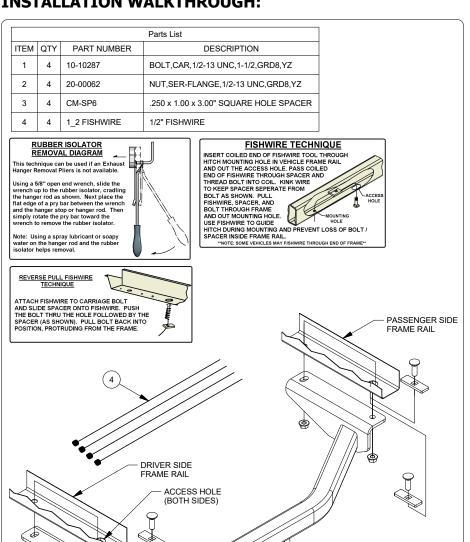

1. Remove lower trim panel from vehicle by removing two (2) pastic fasteners using a flathead screw driver and two (2) hex nuts with a 10mm socket. Return trim panel to owner.

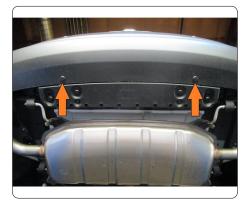



2. Remove four (4) rubber exhaust hangers using exhaust removal pliers or method shown above. Make sure exhaust is supported.





For more information log onto www.curtmfg.com, & for helpful towing tips log onto www.hitchinfo.com

INSTALLATION WALKTHROUGH:

3. Fishwire one (1) 1/2" carriage bolt and one (1) CM-SP6 through access hole and into forward-most hole in each frame rail. Leave fishwires attached.





 Reverse fishwire one (1) 1/2" carraige bolt and one (1) CM-SP6 through access hole in each frame rail. Leave fishwires attached.





5. Raise hitch into position guiding fishwire ends through attachement holes. Remove fishwires and secure hitch with 1/2" hex flange nuts.





6. Torque all 1/2" fasteners to 110 ft-lbs. Raise exhaust back into position and re-install exhaust hangers.





For more information log onto www.curtmfg.com, & for helpful towing tips log onto www.hitchinfo.com

TOWING SAFETY INFORMATION


Gross Trailer Weight / GTW

The Gross Trailer Weight is the weight of the trailer & cargo. Measure this by putting the fully loaded trailer on a vehicle scale.



Tongue Weight / TW

The downward force that is exerted on the hitch ball by the coupler. The tongue weight will vary depending on where the load is positioned in relationship to the trailer axle(s). To measure the tongue weight, use either a commercial scale or a bathroom scale with the coupler at towing height. When using a bathroom scale with heavier tongue weights, use the method shown and multiply the scale reading by 3.

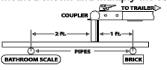

Weight Carrying / WC

The total weight of both the trailer and the cargo inside. Never exceed the weight capacity of your trailer hitch.

Weight Distribution / WD

Used to balance the weight of the cargo between the front and rear wheels throughout the trailer, allowing for better steering, braking, and level riding.






Sway Control

A device used to reduce the lateral movements of the trailer that are caused by the wind. This works in conjunction with a weight distribution hitch. Do not use this on a class 1 or 2 hitch, or with surge brakes.


How Much Can You Safely Tow?

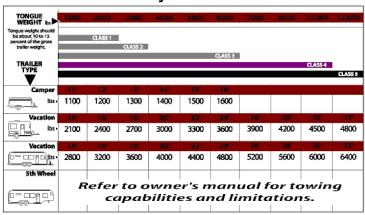

Ball Mount

The ball mount is placed inside the opening of the receiver hitch which is mounted to the vehicle. Make sure a hitch pin and clip is properly securing the ball mount to the receiver hitch before you begin towing.

A: Rise. B: Drop. C: Hole Size. D: Length.

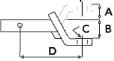


Trailer Ball

The connection from the hitch to the trailer. There are many factors that determine the correct hitch ball:

- Number one is the hitch ball's gross trailer weight rating.
- The mounting platform must be at least 3/8" thick.
- The hole diameter must not be more than 1/16" larger than the threaded shank.
- · Every time you tow, check the nut and lock washer to make sure they are fastened securely.

 • A: Ball Dia. B: Shank Length. C: Shank Dia. D: Shank Rise.

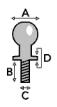

Coupler

The component that is placed over the trailer ball to connect the vehicle to the trailer. Be sure that the coupler size matches the size of the hitch ball and that the coupler handle is securely fastened. To determine what size hitch ball you need for your application you will need to know the size of coupler that is on the trailer. Be sure your coupler is properly adjusted to the ball you are using.

NOTE: For added security the use of safety devices such as Coupler Safety Pins and Locks is stronaly recommended.

Safety Chains

Safety chains are a requirement and should be crossed under the tongue of the trailer so that the tongue will not drop to the road if it becomes separated from the hitch. Always leave enough slack so you can turn. Never allow the safety chains to drag on the ground and never attach the chains to the bumper.


Trailer Classification: Safety Chain Breaking Force - Minimum Class 1: 2,000 lbs. (8.9 kN)
Class 2: 3,500 lbs. (15.6 kN)
Class 3: 5,000 lbs. (22.2 kN)

The strength rating of each length of safety chain or its equivalent and its attachments shall be equal to or exceed in minimum breaking force the GVWR (Gross Vehicle Weight Rating) of the trailer.

Electrical

Trailer lights, Electric Brakes, Break-away systems - Every time you tow, be sure to check that all components are working properly.

Wiring identification by color:

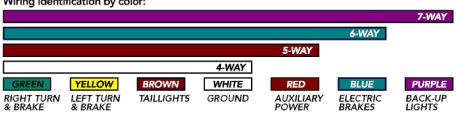

CURT DISCLAIMER: WIRING COLOR SHOWN WORK IN CONJUNCTION WITH CURT MANUFACTURING PRODUCTS.

13284

MAZDA CX-9

6/5/2020

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 4000 LBS. TRAILER WEIGHT & 600 LBS. TONGUE WEIGHT. GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 5000 LBS. TRAILER WEIGHT & 600 LBS. TONGUE WEIGHT



WARNING: *** DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY. ***

FOR MORE INFORMATION LOG ONTO WWW.CURTMFG.COM & FOR HELPFUL TOWING TIPS LOG ONTO WWW.HITCHINFO.COM HAVING INSTALLATION OUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634



HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634					
			Parts List	FISHWIRE TECHNIQUE	
ITEM	1 QTY	PART NUMBER	DESCRIPTION	INSERT COILED END OF FISHWIRE TOOL THROUGH	REVERSE PULL FISHWIRE TECHNIQUE
1	4	10-10287	BOLT,CAR,1/2-13 UNC,1-1/2,GRD8,YZ	HITCH MOUNTING HOLE IN VEHICLE FRAME RAIL AND OUT THE ACCESS HOLE. PASS COILED	
2	4	20-00062	NUT,SER-FLANGE,1/2-13 UNC,GRD8,YZ	END OF FISHWIRE THROUGH SPACER AND THREAD BOLT INTO COIL. KINK WIRE	ATTACH FISHWIRE TO CARRIAGE BOLT
3	4	CM-SP6	.250 x 1.00 x 3.00" SQUARE HOLE SPACER	TO KEEP SPACER SEPERATE FROM BOLT AS SHOWN. PULL ACCESS	
4	4	1_2 FISHWIRE	1/2" FISHWIRE	FISHWIRE, SPACER, AND BOLT THROUGH FRAME	SPACER (AS SHOWN). PULL BOLT BACK INTO POSITION, PROTRUDING FROM THE FRAME.
Using wren the high simp wren Note wate	RENtechnicated Remarks to the second restriction of the second remarks to the second remarks the sec	GUAL DIAGRAM Que can be used if an Exhoval Pliers is not available to the rubber isolator, crained as shown. Next place a pry bar between the wriger stop or hanger rod. The the pry bar toward the emove the rubber isolator of a spray lubricant or soate hanger rod and the rubber removal.	the adling the rench Then	AND OUT MOUNTING HOLE. USE FISHWIRE TO GUIDE HITCH DURING MOUNTING AND PREVENT LOSS OF BOLT / SPACER INSIDE FRAME RAIL. **NOTE: SOME VEHICLES MAY FISHWIRE THROUGH END OF FRAME**	PASSENGER SIDE FRAME RAIL
F	10r T(LAT I 6" S(OOLS REQUIRED RATCHET mm & 3/4" SOCKE ORQUE WRENCH HEAD SCREWDR OCKET EXTENSI AFETY GLASSES	ET H RIVER ION	4	
		TING HOLES— BOTH SIDES)	DRIVER SIDE FRAME RAIL		
<u>IN</u>	STALL PROF NOVIO STALL LOWE NO DE	VEIGHT: 34 LBS. TIME ESSIONAL: 30 MINUT CE (DIY): 60 MINUT NOTES: ER EXHAUST RILLING REQUIRED			

INSTALLATION STEPS

REMOVE PANEL COVER

- 1. Remove lower trim panel from vehicle by removing two (2) plastic fasteners using a flathead screw driver and two (2) hex nuts using a 10mm socket. Return trim panel to owner.
- 2. Remove four (4) rubber exhaust hangers using exhaust removal pliers or method shown above. Make sure exhaust is supported.
- 3. Fishwire one (1) 1/2" carriage bolt and one (1) CM-SP6 through access hole and into forward-most hole in each frame rail. Leave fishwires attached.
- 4. Reverse fishwire one (1) 1/2" carraige bolt and one (1) CM-SP6 through access hole in each frame rail. Leave fishwires attached.
- 5. Raise hitch into postition guiding fishwire ends through attachment holes. Remove fishwires and secure hitch with 1/2" hex flange nuts.
- 6. Torque all 1/2" fasteners to 110 ft-lbs. Raise exhaust back into postion and re-install exhaust hangers.



PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Scan for more information CURT Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.